


PENDLETON 1744 INSTALLATION INSTRUCTIONS

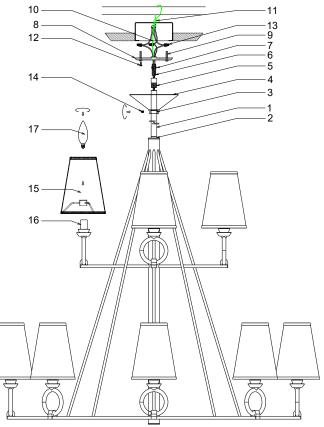

ITEM	DESCRIPTION	PART NUMBER
1	3/4" DIA HVL STM KIT 3"+6"+12"+18"+18"	STM-172403,06,12,18
2	FIXTURE ASSEMBLY	FAS-001744
3	PLASTIC RING	RNG-001724
4	CANOPY	CPY-001724
5	REDUCER	HRD-001724
6	NIPPLE	NIP-001724
7	HEX NUT	NUT-001710-H
8	MOUNTING PLATE	HDW-001710
9	MOUNTING SCREW	SCR-001710-M
10	SAFETY CABLE	CBL-001744-S
11	CABLE CLIP	CBL-001744-C
12	GROUND SCREW	SCR-001710-G
13	WIRE NUT	NUT-001710-W
14	ALLEN SCREW	MIS-001724
15	SHADE	SHD-001710
16	CANDLE COVER	CDL-001710
17	BULB	NOT INCLUDED

WARNING/CAUTION


- DISCONNECT POWER BEFORE RE-LAMPING OR WIRING THE FIXTURE. READ ALL INSTRUCTIONS COMPLETELY BEFORE STARTING INSTALLATION.
- TO AVOID THE RISK OF FIRE OR SHOCK, FIXTURE MUST BE INSTALLED IN COMPLIANCE WITH ALL
 APPLICABLE NATIONAL AND LOCAL ELECTRICAL/BUILDING CODES. THE INSTALLATION AND
 MAINTENANCE OF THIS UNIT SHOULD BE COMPLETED BY A LICENSED ELECTRICIAN OR CERTIFIED
 FACTORY TRAINED TECHNICIAN.
- CALIFORNIA PROP 65: THIS LIGHTING FIXTURE CONTAINS CHEMICALS KNOWN TO THE STATE OF CALIFORNIA TO CAUSE CANCER, BIRTH DEFECTS, AND/OR OTHER REPRODUCTIVE HARM. WASH HANDS AFTER USE.
- REMOVE THE FIXTURE, PARTS AND PARTS BAG(S) FROM THE CARTON. BEFORE DISCARDING THE CARTON, DOUBLE CHECK TO MAKE CERTAIN THAT ALL PARTS ARE FOUND. INSPECT THE FIXTURE PRIOR TO INSTALLATION FOR ANY DAMAGE TO THE FIXTURE.
- DIMMING: THE FIXTURE CAN BE CONTROLLED BY A WALL DIMMING DEVICE. ONLY USE TRIAC/ELECTRONIC DIMMER. MAKE SURE THE CARTON IS MARKED FOR USE WITH LED COMPACT FLUORESCENT-INCANDESCENT LIGHT SOURCE ONLY. THESE CAN BE PROVIDED BY YOUR LOCAL ELECTRICAL DISTRIBUTOR, HOME CENTER, OR HARDWARE STORE.
- PLEASE CLEAN WITH A SOFT, DRY CLOTH ONLY! DO NOT USE CLEANSERS

FIXTURE INSTALLATION

- Feed the wire through the STEM (1) and twist tightly onto the FIXTURE ASSEMBLY (2). Keep adding additional stems until your desired hanging height is met.
- 2. Attach the PLASTIC RING (3) inside the CANOPY (4). Place the CANOPY (4) at the top of the STEM (1) and let the CANOPY (4) slide through the STEM (1).
- 3. Fully thread the REDUCER (5) on top of the STEM (1). Thread the NIPPLE (6) onto the REDUCER (5), then thread the HEX NUT (7) and the MOUNTING PLATE (8) onto the NIPPLE (6), respectively.
- 4. Lift up the MOUNTING PLATE (8) along with the FIXTURE ASSEMBLY (2) up to the ceiling and install the MOUNTING PLATE (8) onto the junction box using the MOUNTING SCREWS (9). This fixture is designed to be mounted on standard round or octagon junction box. The junction box must be securely mounted to the structure of the building. Secure the NIPPLE (6) unto the MOUNTING PLATE (8) by threading the HEX NUT (7). Attach the SAFETY CABLE (10) to the building structure or brace using CABLE CLIP (11) Pull the wire out from the junction box. Trim off the excess wire to a minimum 6" beyond the STEM (1) and strip each wire 1/2".
- Attach the Ground wire (Green) to the ground inside the outlet box (Generally green or bare copper wire) or the GROUND SCREW (12) on the MOUNTING PLATE (8). NEVER CONNECT GROUND WIRE TO "HOT" WIRE! FAILURE TO FOLLOW THIS COULD RESULT IN SERIOUS INJURY OR DEATH!
- 6. Connect the white fixture lead to the neutral (Generally white) wire in the outlet box. Fasten the wires together with an approved fastener (WIRE NUT) (13). Starting 1" below the fastener, tightly wrap the connection with electrical tape so that the connections seals the end of the fastener. MAKE SURE THERE ARE NO EXPOSED WIRE OF STRANDS THAT COULD CAUSE A DANGEROUS SHORT CIRCUIT!
- Connect the black fixture leads to the hot (Generally black) wire in the outlet box. Fasten the joined wires same
 as previous step. NEVER REVERSE HOT AND NEUTRAL WIRES. FAILURE TO FOLLOW THIS COULD
 RESULT IN SERIOUS INJURY OR DEATH!
- 3. Push the wires back into the junction box. Lift up the CANOPY (4) and secure with ALLEN SCREW (14).
- 9. Attach the SHADE (15) onto the CANDLE COVER (16).
- Screw the BULB (17) up into the sockets of the fixture. THIS FIXTURE IS RATED FOR 40 WATTS LAMP. DO NOT EXCEED THE RECOMMENDED WATTAGE!
- 10. Restore power to the outlet at the breaker or fuse box.



PENDLETON 1744 INSTALLATION INSTRUCTIONS

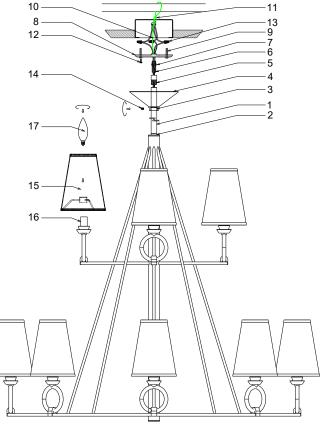

ITEM	DESCRIPTION	PART NUMBER
1	3/4" DIA HVL STM KIT 3"+6"+12"+18"+18"	STM-172403,06,12,18
2	FIXTURE ASSEMBLY	FAS-001744
3	PLASTIC RING	RNG-001724
4	CANOPY	CPY-001724
5	REDUCER	HRD-001724
6	NIPPLE	NIP-001724
7	HEX NUT	NUT-001710-H
8	MOUNTING PLATE	HDW-001710
9	MOUNTING SCREW	SCR-001710-M
10	SAFETY CABLE	CBL-001744-S
11	CABLE CLIP	CBL-001744-C
12	GROUND SCREW	SCR-001710-G
13	WIRE NUT	NUT-001710-W
14	ALLEN SCREW	MIS-001724
15	SHADE	SHD-001710
16	CANDLE COVER	CDL-001710
17	BULB	NOT INCLUDED

A ATTENTION PRUDENCE

- DÉBRANCHEZ L'ALIMENTATION AVANT DE REMPLIR OU DE CÂBLER LE LUMINAIRE. LISEZ COMPLÈTEMENT TOUTES LES INSTRUCTIONS AVANT DE COMMENCER L'INSTALLATION
- POUR ÉVITER LE RISQUE D'INCENDIE OU D'ÉLECTROCUTION, LE LUMINAIRE DOIT ÊTRE INSTALLÉ CONFORMÉMENT À TOUS LES CODES ÉLECTRIQUES/DE CONSTRUCTION NATIONAUX ET LOCAUX APPLICABLES. L'INSTALLATION ET L'ENTRETIEN DE CET APPAREIL DOIVENT ÊTRE EFFECTUÉS PAR UN ÉLECTRICIEN AGRÉÉ OU UN TECHNICIEN CERTIFIÉ FORMÉ EN USINE.
- CALIFORNIE PROP 65: CET APPAREIL D'ÉCLAIRAGE CONTIENT DES PRODUITS CHIMIQUES CONNUS PAR L'ÉTAT DE CALIFORNIE POUR PROVOQUER LE CANCER, DES MALADIES CONGÉNITALES ET/OU D'AUTRES DOMMAGES À LA REPRODUCTION. LAVER LES MAINS APRÈS UTILISATION.
- RETIRER LE LUMINAIRE, LES PIÈCES ET LE(S) SAC(S) DE PIÈCES DU CARTON. AVANT DE JETER LE CARTON, VÉRIFIEZ DOUBLE POUR VOUS ASSURER QUE TOUTES LES PIÈCES SONT TROUVÉES. INSPECTER LE LUMINAIRE AVANT L'INSTALLATION POUR TOUT DOMMAGE AU LUMINAIRE.
- GRADATION: LE LUMINAIRE PEUT ÊTRE CONTRLÉ PAR UN DISPOSITIF DE GRADATION MURALE. UTILISER
 UNIQUEMENT UN GRADATEUR TRIAC/ÉLECTRONIQUE. ASSUREZ-VOUS QUE LE CARTON EST MARQUÉ
 POUR UNE UTILISATION AVEC UNE SOURCE DE LUMIÈRE FLUORESCENTE À INCANDESCENTE COMPACTE
 UNIQUEMENT. CEUX-CI PEUVENT ÊTRE FOURNIS PAR VOTRE DISTRIBUTEUR ÉLECTRIQUE LOCAL,
 CENTRE À DOMICILE OU MAGASIN DE QUINCAILLERIE.
- VEUILLEZ NETTOYER UNIQUEMENT AVEC UN CHIFFON DOUX ET SEC! N'UTILISEZ PAS DE NETTOYANTS

FIXTURE INSTALLATION

- Feed the wire through the STEM (1) and twist tightly onto the FIXTURE ASSEMBLY (2). Keep adding additional stems until your desired hanging height is met.
- 2. Attach the PLASTIC RING (3) inside the CANOPY (4). Place the CANOPY (4) at the top of the STEM (1) and let the CANOPY (4) slide through the STEM (1).
- 3. Fully thread the REDUCER (5) on top of the STEM (1). Thread the NIPPLE (6) onto the REDUCER (5), then thread the HEX NUT (7) and the MOUNTING PLATE (8) onto the NIPPLE (6), respectively.
- 4. Lift up the MOUNTING PLATE (8) along with the FIXTURE ASSEMBLY (2) up to the ceiling and install the MOUNTING PLATE (8) onto the junction box using the MOUNTING SCREWS (9). This fixture is designed to be mounted on standard round or octagon junction box. The junction box must be securely mounted to the structure of the building. Secure the NIPPLE (6) unto the MOUNTING PLATE (8) by threading the HEX NUT (7). Attach the SAFETY CABLE (10) to the building structure or brace using CABLE CLIP (11) Pull the wire out from the junction box. Trim off the excess wire to a minimum 6" beyond the STEM (1) and strip each wire 1/2".
- Attach the Ground wire (Green) to the ground inside the outlet box (Generally green or bare copper wire) or the GROUND SCREW (12) on the MOUNTING PLATE (8). NEVER CONNECT GROUND WIRE TO "HOT" WIRE! FAILURE TO FOLLOW THIS COULD RESULT IN SERIOUS INJURY OR DEATH!
- 6. Connect the white fixture lead to the neutral (Generally white) wire in the outlet box. Fasten the wires together with an approved fastener (WIRE NUT) (13). Starting 1" below the fastener, tightly wrap the connection with electrical tape so that the connections seals the end of the fastener. MAKE SURE THERE ARE NO EXPOSED WIRE OF STRANDS THAT COULD CAUSE A DANGEROUS SHORT CIRCUIT!
- Connect the black fixture leads to the hot (Generally black) wire in the outlet box. Fasten the joined wires same
 as previous step. NEVER REVERSE HOT AND NEUTRAL WIRES. FAILURE TO FOLLOW THIS COULD
 RESULT IN SERIOUS INJURY OR DEATH!
- 3. Push the wires back into the junction box. Lift up the CANOPY (4) and secure with ALLEN SCREW (14).
- 9. Attach the SHADE (15) onto the CANDLE COVER (16).
- Screw the BULB (17) up into the sockets of the fixture. THIS FIXTURE IS RATED FOR 40 WATTS LAMP. DO NOT EXCEED THE RECOMMENDED WATTAGE!
- 10. Restore power to the outlet at the breaker or fuse box.